



# CONTRACT VINYL FABRICS

Burst  
Classic  
English Pub  
Glaze  
Neochrome III  
Spirit Millennium

**MARYLAND CORRECTIONAL ENTERPRISES**

7275 Waterloo Road  
Jessup, Maryland 20794  
410-540-5400  
Fax: 410-540-5569  
[www.mce.md.gov](http://www.mce.md.gov)



Spirit Millennium  
083 SAND



Spirit Millennium  
091 CAMEL



Classic  
C26 PAPYRUS



Glaze  
G10 AMBER



Burst  
BU7 WHITE PINE



Spirit Millennium  
100 BRITISH TAN



English Pub  
064 RUBY



Glaze  
G13 FLAME



Neochrome III  
N62 PORT



Classic  
C02 SADDLE



Glaze  
G15 HONEY



Spirit Millennium  
042 PLUM



Glaze  
G12 CEDAR



Spirit Millennium  
078 BURGUNDY



Burst  
BU0 AUTUMN



English Pub  
071 OXBLOOD



Glaze  
G19 SHIRAZ



Classic  
C15 BURGUNDY



Glaze  
G11 BRUNETTE





Classic  
C27 BUFF



Glaze  
G14 HIDE



Spirit Millennium  
099 SAGE



Spirit Millennium  
086 FOREST




Burst  
BU6 SUNGLOW




Burst  
BU2 FLORA




Classic  
C19 TAUPE

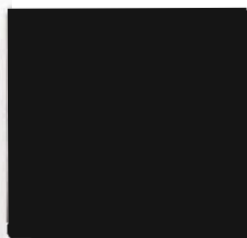

Spirit Millennium  
088 MOCHA

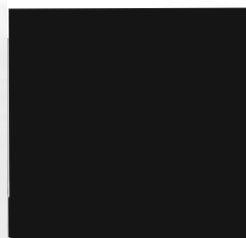


Glaze  
G18 MEADOW

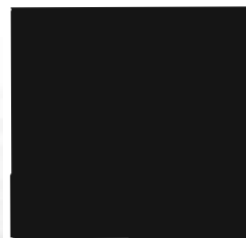

English Pub  
069 HUNTER



Burst  
BU5 SILVER SCREEN

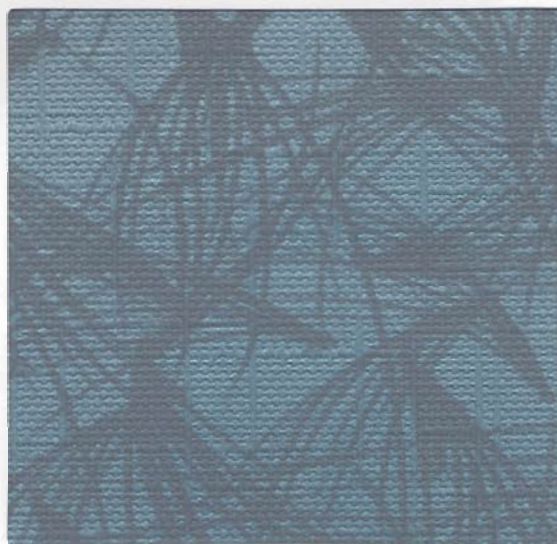

Burst  
BU3 LAGOON



English Pub  
065 GRAY



Classic  
C13 GRANITE



Classic  
C01 SPRUCE



Glaze  
G16 LICORICE



Spirit Millennium  
084 ALABASTER



Spirit Millennium  
093 PUTTY



Spirit Millennium  
018 DOVE



Spirit Millennium  
097 CONCORD



Burst  
BU4 LAKESIDE



Neochrome III  
N26 SLATE BLUE



Spirit Millennium  
073 ROYAL




Spirit Millennium  
096 GRAPHITE



Spirit Millennium  
080 REGIMENTAL BLUE



Neochrome III  
N42 PINE FOREST

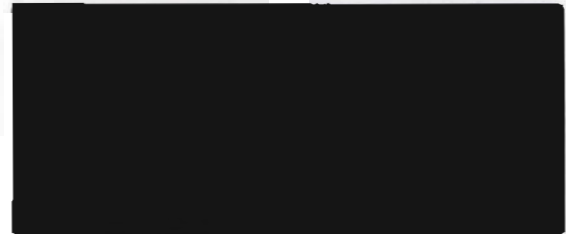


Classic  
C16 ADMIRAL



English Pub  
063 ANTIQUE BLUE



Burst  
BU1 DRAGONFLY

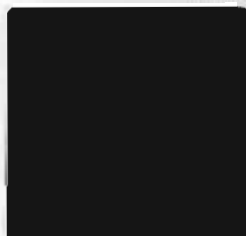

Classic  
C03 BLACK



Neochrome III  
N44 LAPIS



English Pub  
072 BLACK



Neochrome III  
N22 BLACK



Glaze  
G17 MARINE



English Pub  
070 NAVY



Pattern	Content	Weight/Width	Abrasion ASTM-D 4157-92 (Double Rubs)	Cold Crack Fed. Std. No. 191A Method 5874/CFFA-6	Ultra Violet Resistance G26-96 Method C/CFFA-2	Mildew Resistance ATM G21-96 CFFA-120	Flame Resistance
<b>Burst</b> Price Level 2	100% Vinyl	32.25 oz./yd. 54" wide	500,000 Double Rubs	- 25° F		Pass	Cal. 117 Section E BIFMA Class 1 or A UFAC Class I MVSS 302 Port Authority N.Y./N.J. Fed. Spec. CID AA 2950 FAA FAR 25.853 Fed. Spec. CCC-A-7001 Fed. Std. 191A Method 5903.1
<b>Classic</b> Price Level 2	100% Vinyl	29 oz./yd. 54" wide	250,000 Double Rubs	- 20° F		Pass	Cal. 117 Section E BIFMA Class 1 or A UFAC Class I MVSS 302 NFPA - 260 Boston BFD 1X-1 Port Authority N.Y./N.J. IMO A.652 (16) 8.2 IMO A.652 (16) 8.3
<b>English Pub</b> Price Level 2	100% Vinyl	37 oz./yd. 54" wide	250,000 Double Rubs	- 20° F		Pass	Cal. 117 Section E BIFMA Class 1 or A MVSS 302 Boston BFD 1X-1 Port Authority N.Y./N.J. Fed. Spec. CID AA 2950 FAA FAR 25.853
<b>Glaze</b> Price Level 2	100% Vinyl	36 oz./yd. 54" wide	100,000 Double Rubs	- 10° F			Cal. 117 Section E BIFMA Class 1 or A UFAC Class I MVSS 302 NFPA - 260 ASTM E84 Class 1 or A IMO A.652 (16) 8.2 IMO A.652 (16) 8.3
<b>Neochrome III</b> Price Level 2	100% Vinyl	37 oz./yd. 54" wide	250,000 Double Rubs	- 20° F		Pass	Cal. 117 Section E BIFMA Class 1 or A MVSS 302 Boston BFD 1X-1 Port Authority N.Y./N.J. Fed. Spec. CID AA 2950 FAA FAR 25.853
<b>Spirit Millennium</b> Price Level 2	100% Vinyl	37 oz./yd. 54" wide	1,500,000 Double Rubs	- 20° F		Pass	Cal. 117 Section E BIFMA Class 1 or A MVSS 302 Boston BFD 1X-1 Port Authority N.Y./N.J. Fed. Spec. CID AA 2950 FAA FAR 25.853

#### Cleaning Instructions: English Pub, Neochrome III, Spirit Millennium

##### Advanced BeautyGard<sup>®</sup> Protective Finish

Cleaning is a breeze with Naugahyde brand fabric and its Advanced BeautyGard protective finish. While staining and soiling exposures are common to upholstery fabrics, most stain and soiling may be removed by using the simple cleaning methods that follow:

##### For Light soiling:

1. A solution of 10% household liquid dish soap with warm water applied with a soft damp cloth will remove most soiling.
2. If necessary, a solution of liquid cleanser and water applied with a soft bristle brush. Wipe away the residue with a water-dampened cloth.

##### For Heavier soiling not solved by above method:

1. Dampen a soft white cloth with lighter fluid (naphtha) and rub gently. Rinse with a water-dampened cloth.

NOTE: Use extreme caution with this method. Complete only in a well-ventilated area and away from any open flame.

NOTE: You should try this method on an inconspicuous spot before using it on the original stain/soiling.

##### For the most difficult stains not removed by the above methods:

1. Dampen a soft white cloth with a solution of household bleach (sodium hypochlorite); 10% bleach, 90% water.
2. Rub gently.
3. Rinse with a water-dampened cloth to remove bleach concentration.
4. If necessary, allow a 1:10 diluted bleach solution to puddle on the affected area or apply with a soaked cloth for approximately 30 minutes. Rinse with a water-dampened cloth to remove any remaining bleach concentration.

NOTE: You should try this method on an inconspicuous spot before using it on the original stain/soiling.

##### Note

To restore luster, a light coat of spray furniture wax can be used. Apply for 30 seconds and follow with a light buffing using a clean white cloth.

##### Antimicrobial

Naugahyde with Advanced BeautyGard provides outstanding protection in difficult medical and healthcare environments. Contains agents effective against bacterial and fungal microorganisms.

#### Cleaning Instructions: Burst

In general, most common stains can be easily cleaned using warm, soapy water and clear water rinses. Moderate scrubbing with a medium bristle brush will help loosen soiling materials from the depressions of embossed surfaces. For more stubborn stains, use the Fantastik<sup>®</sup>, Mr. Clean<sup>®</sup>, and Formula 409<sup>®</sup> commercially available mild detergents in accordance with the manufacturer's instructions.

Full strength rubbing alcohol or mineral spirits may be tried cautiously as a last resort on very stubborn stains, if the above suggestions do not work. Indiscriminate use of any solvent, or solvent containing cleaner, can severely damage or discolor vinyl.

Note: Detergents should never be used on a regular or repeated basis for normal cleaning.

Recommended repeated rinsing with clear water after any cleaning procedure.

When opening a new container, please test the cleaner in an inconspicuous area as cleaner manufacturers may change formulas with out notice.

Caution: Exercise care as these solvents are flammable. Use only small quantities of solvents and keep clear of any sources of ignition. Wear protective gloves and ensure cleaning takes place in a well-ventilated area.

#### Cleaning Instructions: Classic, Glaze

Prompt cleaning is always recommended. Ordinary dirt and stains can be removed with mild soap and water. Rinse the cleaned area with clean water and dry with a lint-free cloth. Classic & Glaze will resist, without serious discoloration, the repeated actions of normal dilutions of non-abrasive chlorine or ammonia-based cleaners.

**Resilience<sup>®</sup>** Resilience<sup>®</sup> represents the latest technology in Faux Leather and Vinyl Protection enhancing performance where it is needed the most:

**STAIN RESISTANCE:** With proper care, materials treated with Resilience<sup>®</sup> can be easily cleaned and will guard against stains maintaining the desired surface appearance for years to come.

**ANTI-MICROBIAL & ANTI-BACTERIAL PROTECTION:** Products treated with Resilience<sup>®</sup> are engineered to inhibit bacterial growth, as well as fungus, mold and mildew spores, resulting in a more hygienic environment.

**ABRASION RESISTANCE:** Resilience<sup>®</sup> provides additional wear properties and surface durability to any Vinyl or Faux Leather, thereby increasing the life of the material.

Resilience<sup>®</sup> is not visible, and does not affect the hand of the material. Resilience<sup>®</sup> is engineered to last, even after repeated cleaning and wear. Specify Resilience<sup>®</sup> for the most demanding healthcare and hospitality applications.



## MARYLAND CORRECTIONAL ENTERPRISES

7275 Waterloo Road Jessup, Maryland 20794 410-540-5400 Fax: 410-540-5569 www.mce.md.gov